



# 2010-2014 Ford Mustang Fuses Replacement

This guide will explain how to diagnose and replace a blown fuse.

Written By: Christopher Pell




## INTRODUCTION

Fuses are used in electronics to protect electrical components from being exposed to excess current from the power supply. The fuse melts during a surge and breaks the circuit to protect the valuable electrical component. The element associated with a blown fuse will be disabled until the fuse is replaced.

## Step 1 — Fuses




 Turn off the vehicle before beginning the fuse changing process to avoid electrocution.

- Pull on the lever by the driver's feet.
- Move to the front of the vehicle.
- There is a latch below the center of the hood, push it to the left.
- Lift the hood and support it with the hood strut.




## Step 2

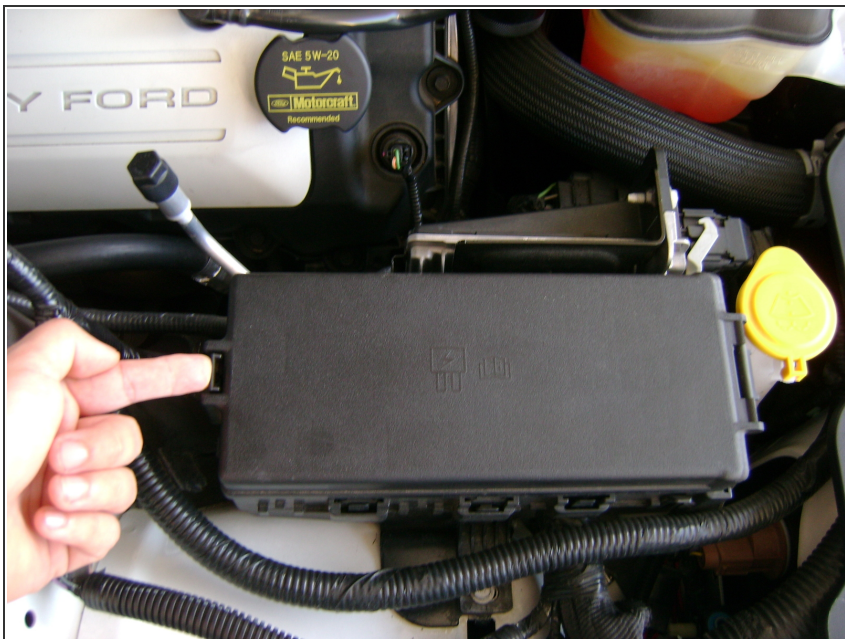



- Locate the fuse box on the driver's side of the hood compartment.
- Disengage the latch located on the side of the fuse box.
- Swing the lid open.

## Step 3

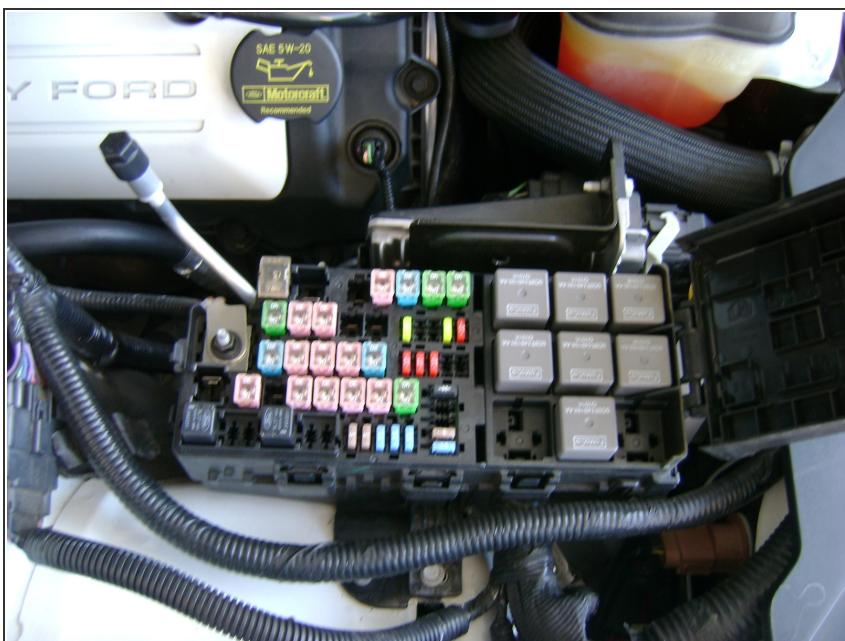

- ① Referencing the manufacturer's exterior fuse box diagram, identify the fuse that needs replacement.

## Step 4

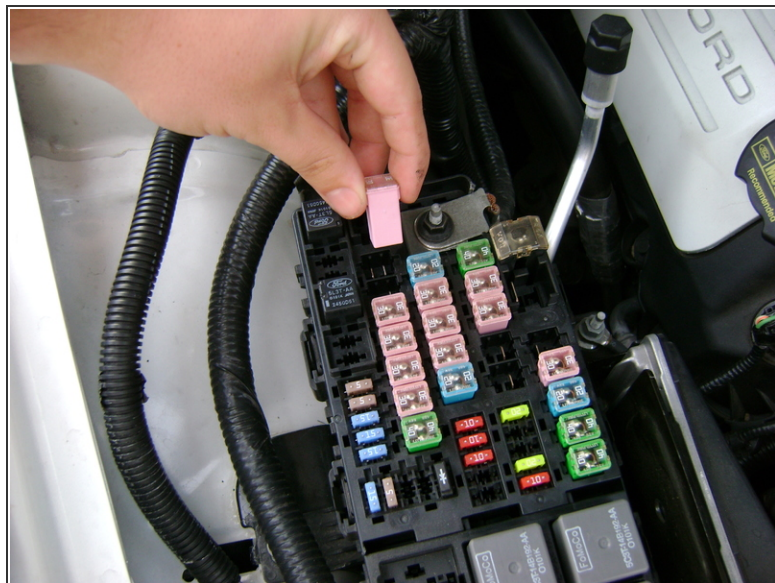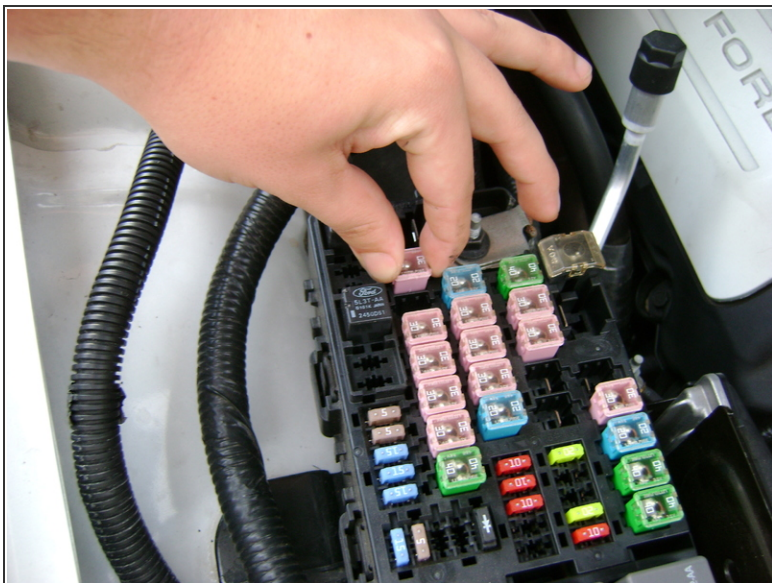

- Carefully remove the fuse that corresponds to the electrical failure in the vehicle.
- Check for damage or discoloration in the fuse.
- Replace the damaged fuse with the new fuse.
- Close the fuse box.

To reassemble, follow these instructions in reverse order.

This document was last generated on 2017-10-21 07:27:31 AM.